

Complete Filtration System

 
Hang-On-Back Multi-Filter

Installation Guide

For more information on this and other AguaReady products, visit our website at getaquaready.com




Before Use

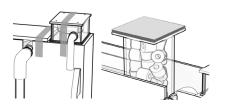

Peel off all of the tape and wraps.

Select Location

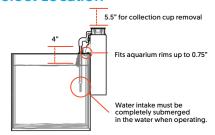


The aquarium's water level must not be more than 4" from the aquarium's rim.

Check Parts

The System should be assembled when you open the box.

For missing parts or support please contact AquaReady support at:


getaquaready.com/support/

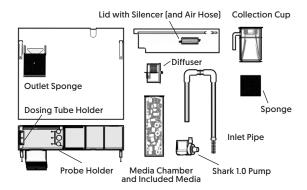


Installation




1. Fill Skimmer with aquarium water until it flows out of the outlet.

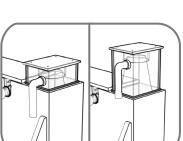


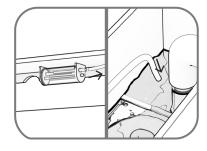


2. Separate the air hose from the silencer. Immerse the air hose in the water.

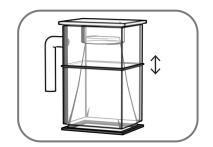


5. Once the bubbles reach the bottom of the collection cup, adjust the position of the collection cup to the highest position by simply changing the position of the O-ring.

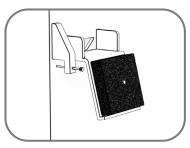

3. Plug in the pump and wait until water is flowing through the skimmer. This will take a few minutes.

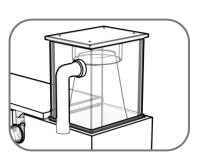

6. After the 2-4 week break-in period, adjust the collection cup to the point where the foam is just barely coming out of the top of the cup.

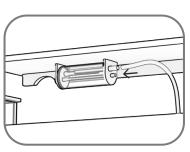

4. Once the pump is operating, reconnect the air hose to the silencer.



Complete Filtration System


Hang-On-Back Multi-Filter

Installation Guide

For more information on this and other AquaReady products, visit our website at **getaquaready.com**




Pump Maintenance (Recommended every 3-4 months)

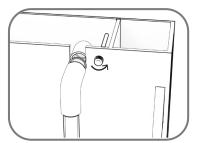


1. Loosen the white screw on the top of the body.




Loosen the screw on the pump collar to remove the pump.

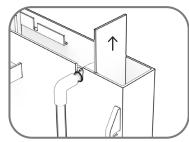


2. Lift up the inside plate.

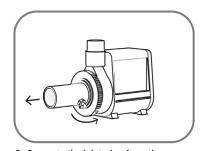


6. Separate the inlet pipe from the pump.

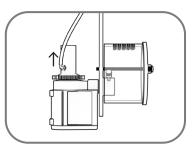

3. Remove the air hose from the pump.

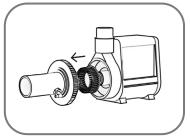

 Pull out the inside parts of the pump and clean with warm water using an aquarium-use toothbrush.

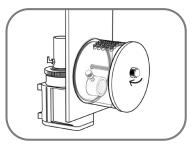


 Loosen the screw from the diffuser and remove the diffuser.


Pump Internals




Component Maintenance

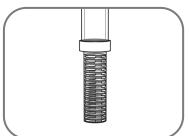


Water Intake: Clean frequently and make sure that it is not clogged.

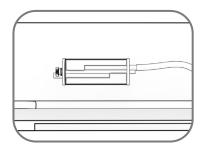

Silencer and Air Hose: These can get clogged by limescale or other foreign matter, clean regularly with citric acid solution.

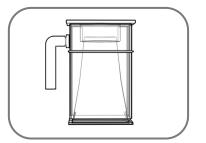

Collection Cup: Clean the collection cup frequently with a sponge and warm water.

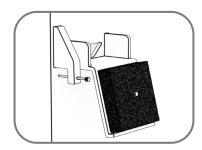

Sponge: Loosen the screw to remove and clean the outlet sponge.