

Protein Skimmer

WS-1 Internal Protein Skimmer

Installation Guide

For more information on this and other AquaReady products, visit our website at getaquaready.com





Check Parts

The Media Reactor should be partially assembled when you open the box.


For missing parts or support please contact AquaReady support at:


getaquaready.com/support/

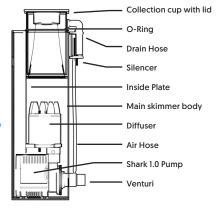

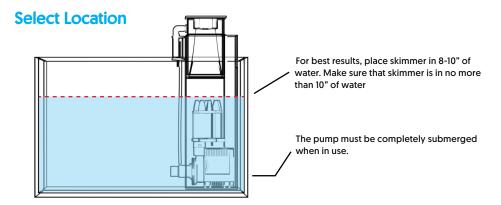


Assembly

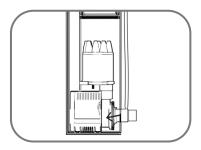


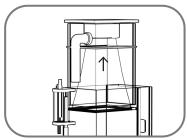


1. Pull out the venturi, and remove the collection cup.

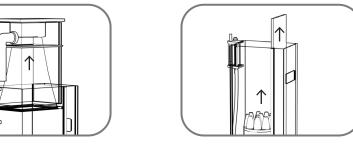


2. Pull out the inside plate and motor assembly and set aside.

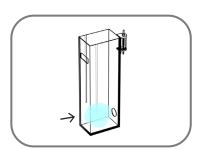


3. Remove and discard the bubble wrap.

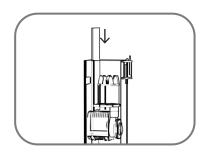

4. Reinstall the inside plate, venturi and coillection cup.

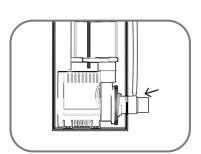

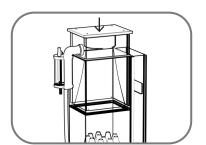



Protein Skimmer


WS-1 Internal Protein Skimmer

Installation Guide


For more information on this and other AquaReady products, visit our website at **getaquaready.com**



To Start

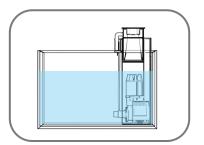


 Place the WS-1 into your aquarium or sump then plug in the pump.

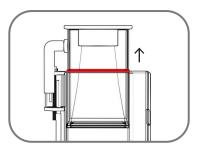


2. The main chamber will fill with bubbles. Carefully adjust the position of the collection cup by changing the position of the O-Ring. If you prefer the skimmate to be lighter lower the cup, and if you prefer it to be darker adjust the cup to be higher.

Maintenance


For best performance, clean the collection cup frequently with warm water. Regular maintanance of the pump will ensure a long life and maximum performance (recommended every 3 months). Disassemble the pump through the foillowing steps.

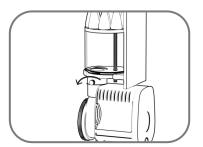


1. Loosen the screw under the diffuser and seperate the pump.

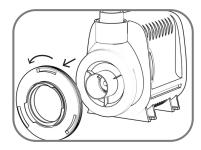

2. Remove the cover of the pump

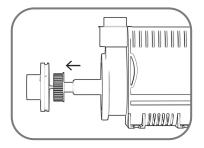

 Remove the impeller and clean with warm water and aquarium-use toothbrush.

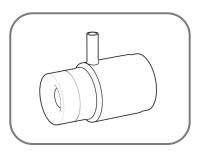

 The venturi should be cleaned monthly and flushed weekly due to calcuim carbonate buikdup for best performance.